





<CPT BOARD>

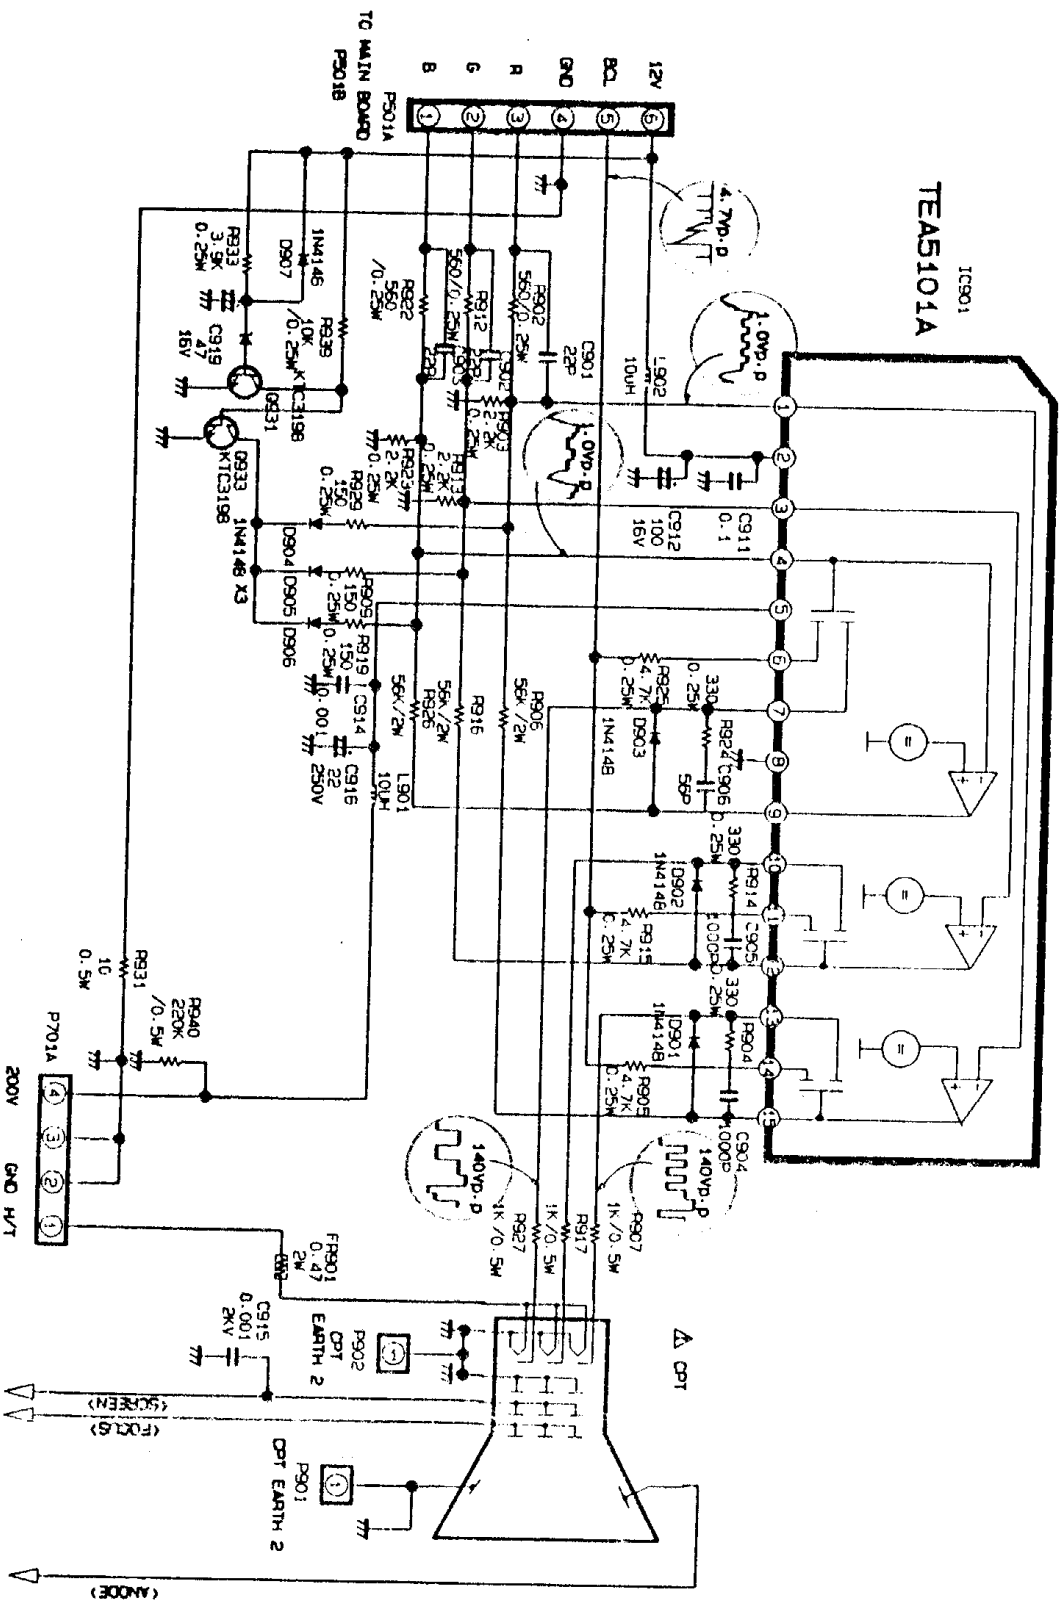

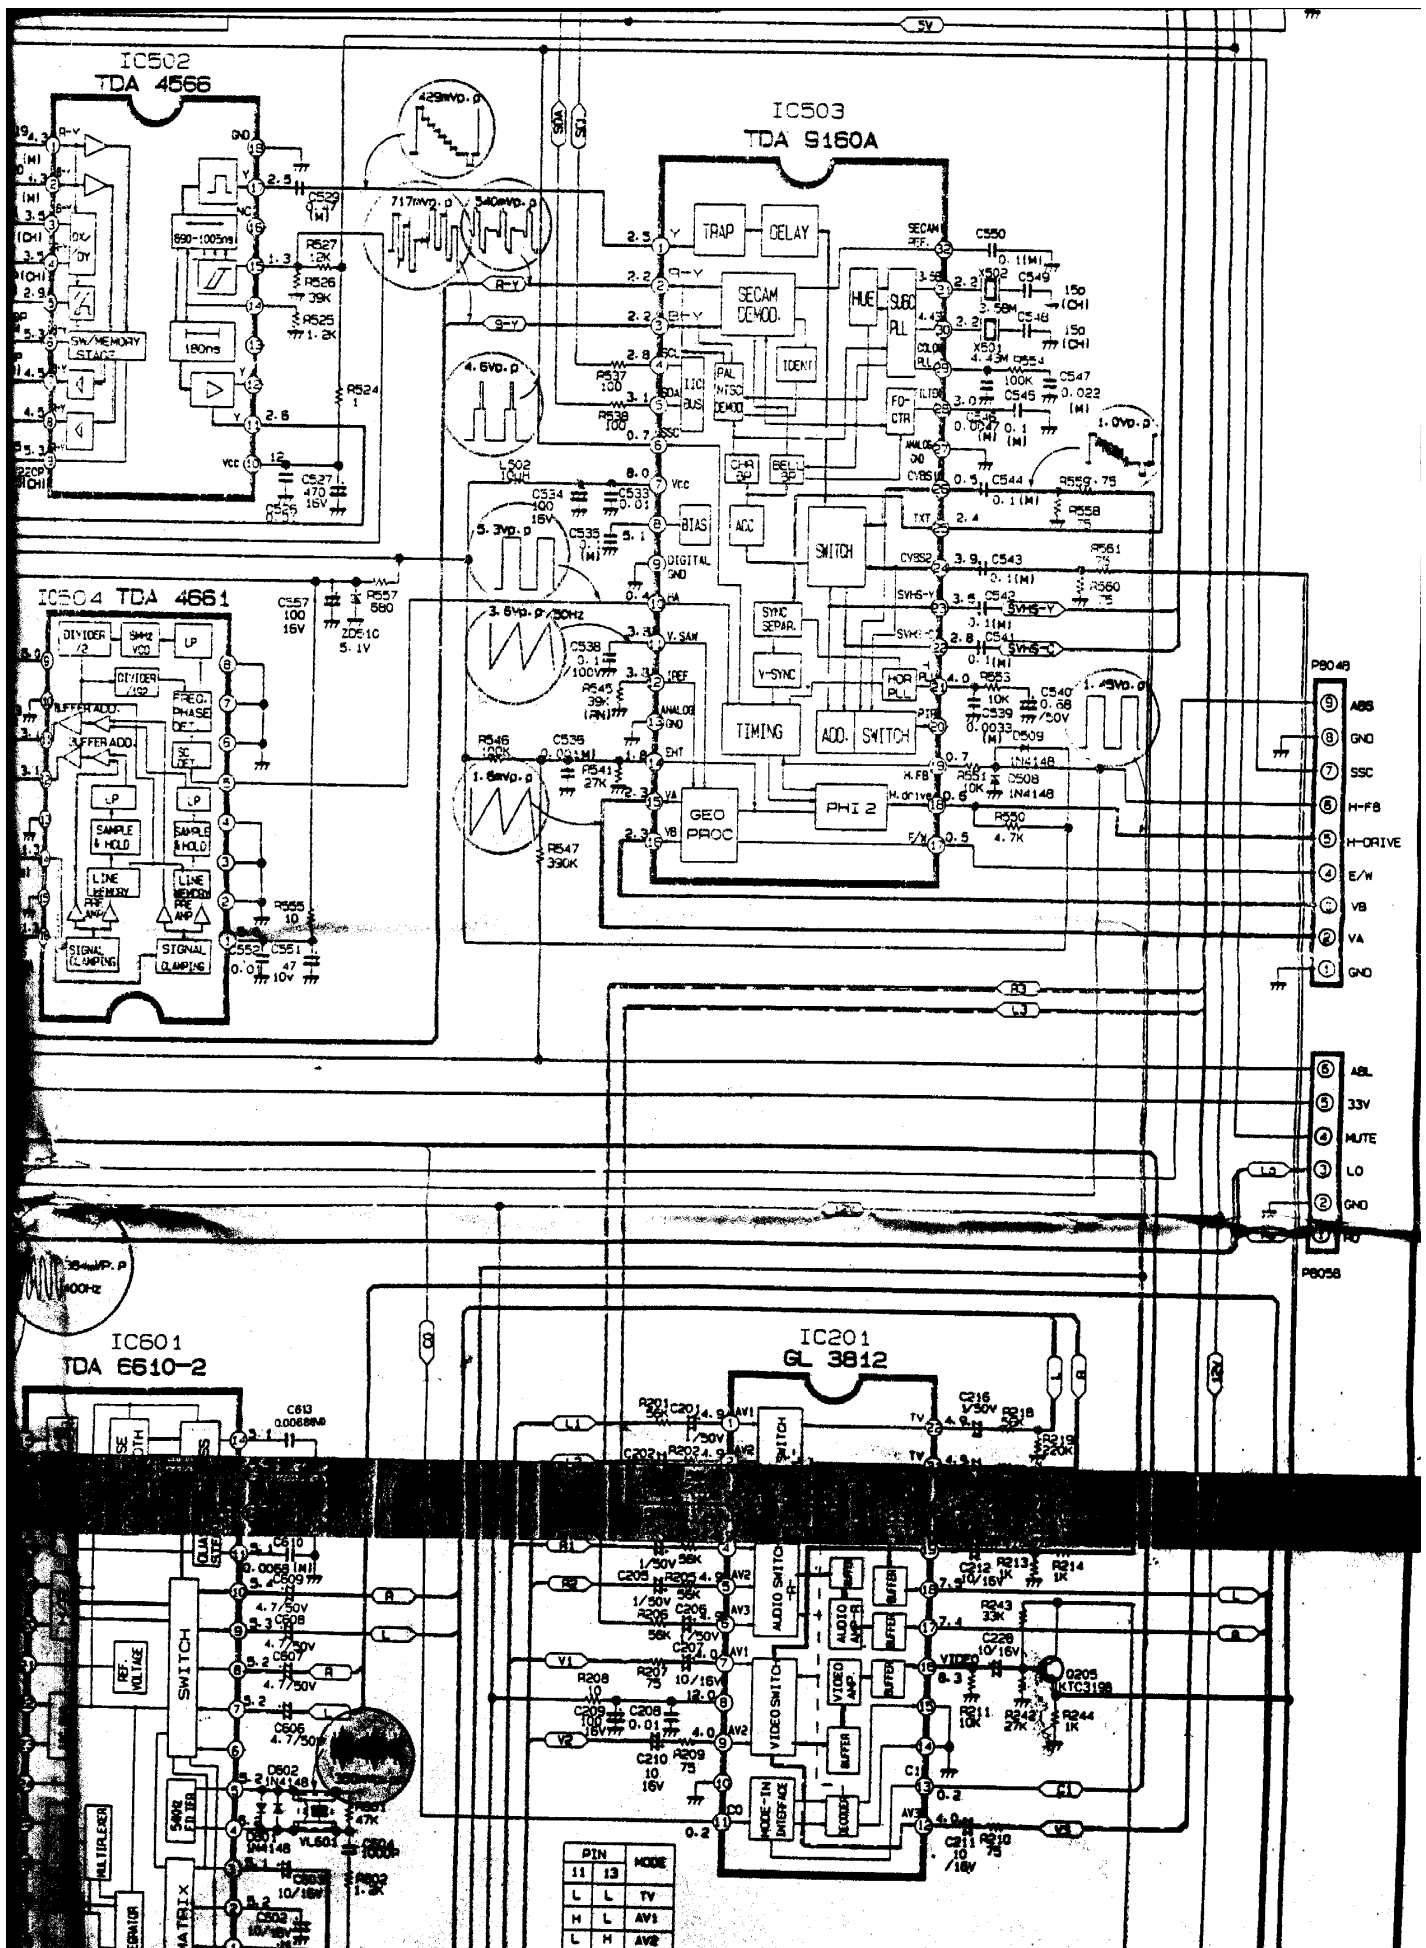

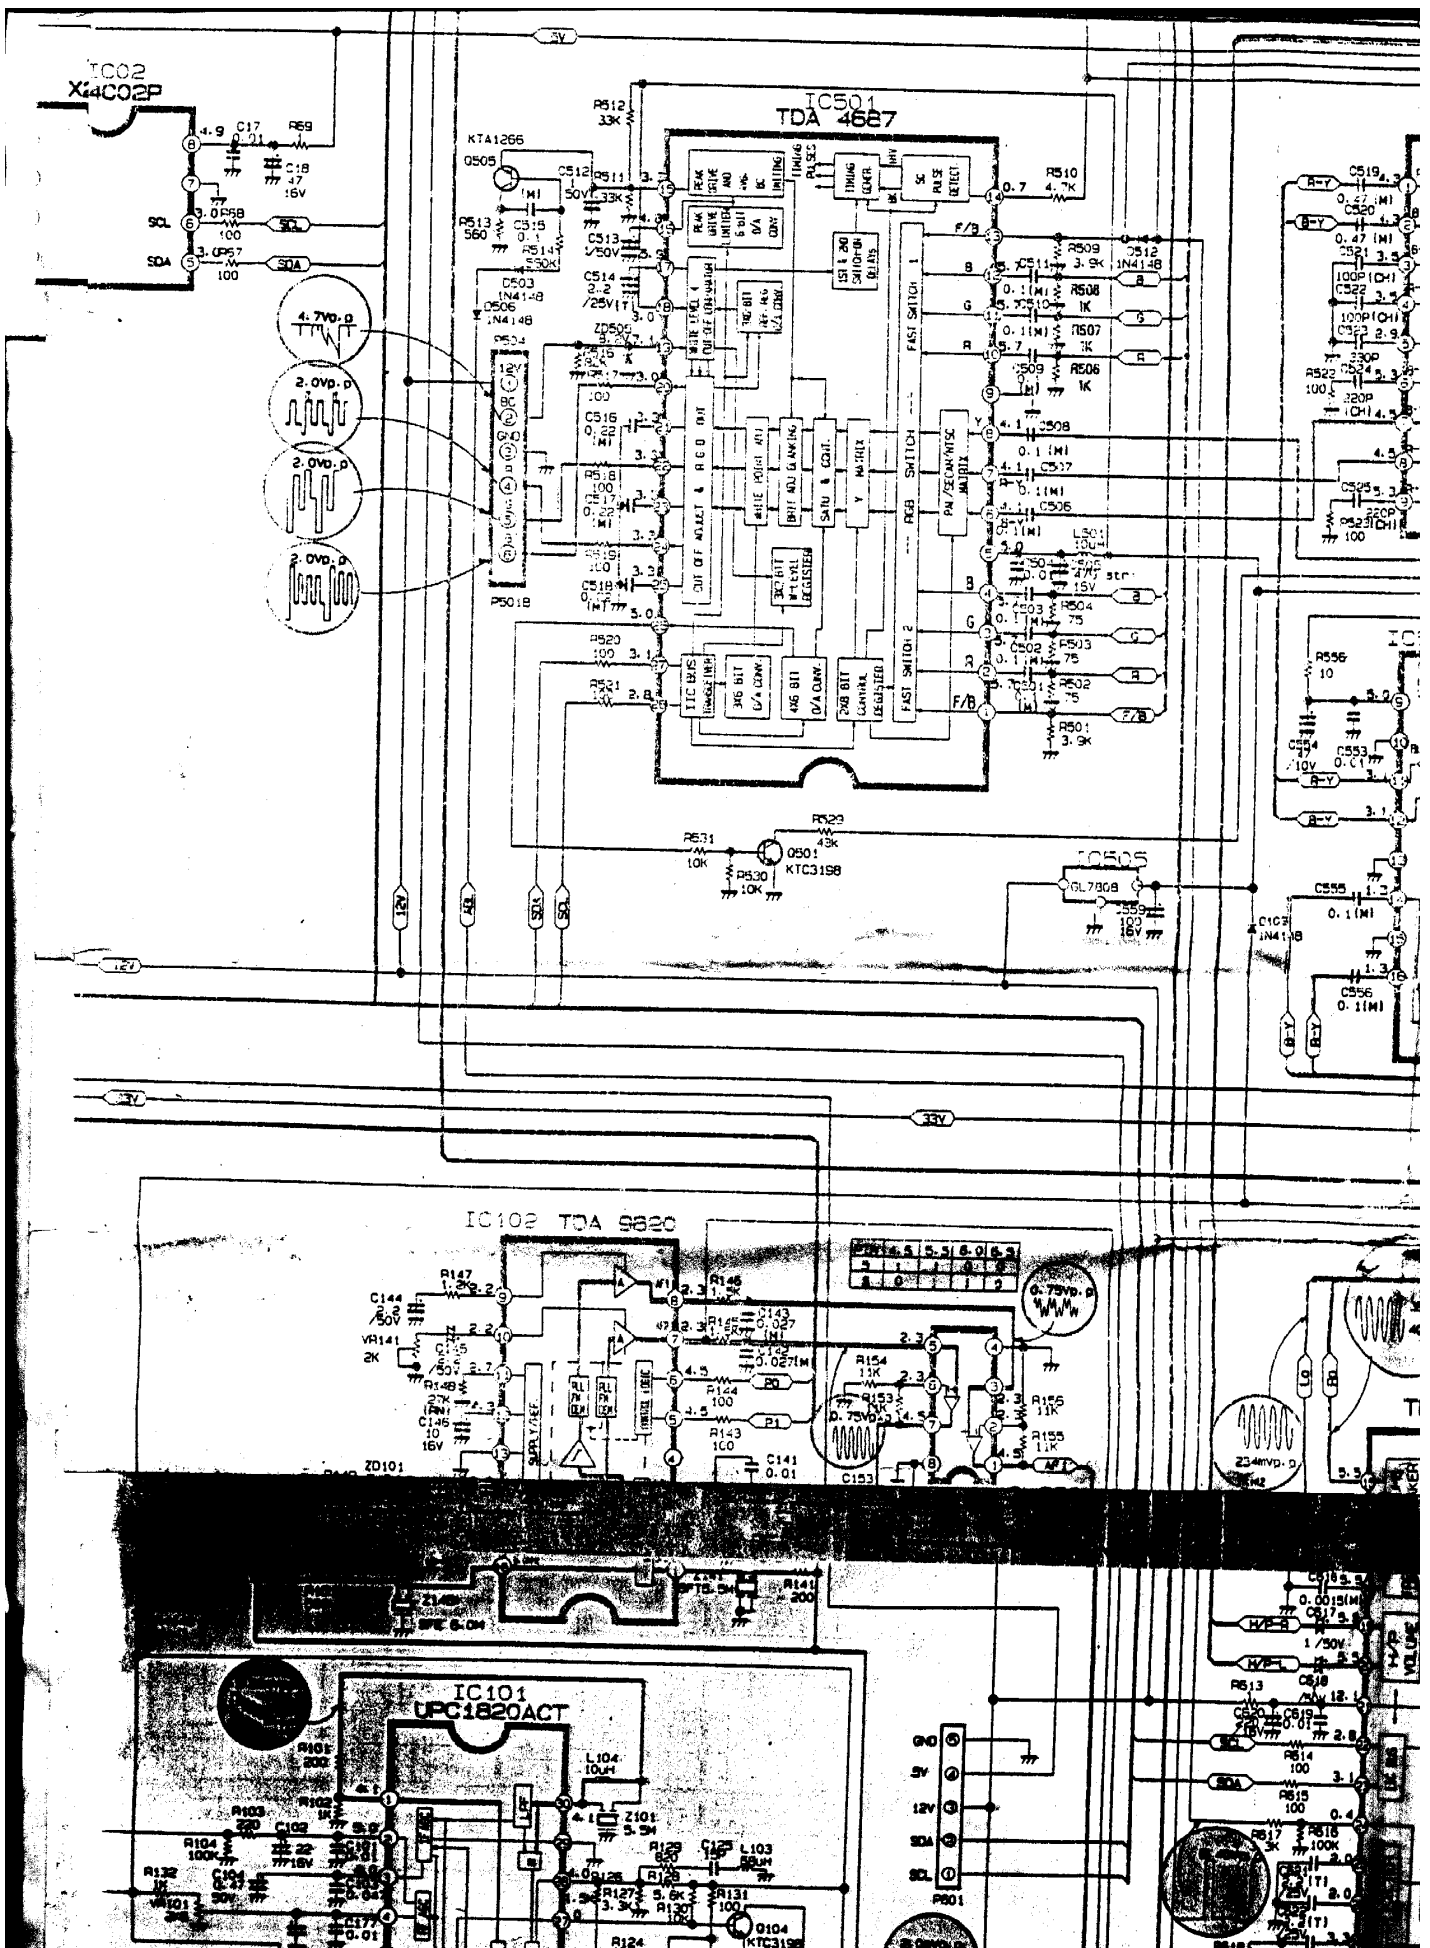

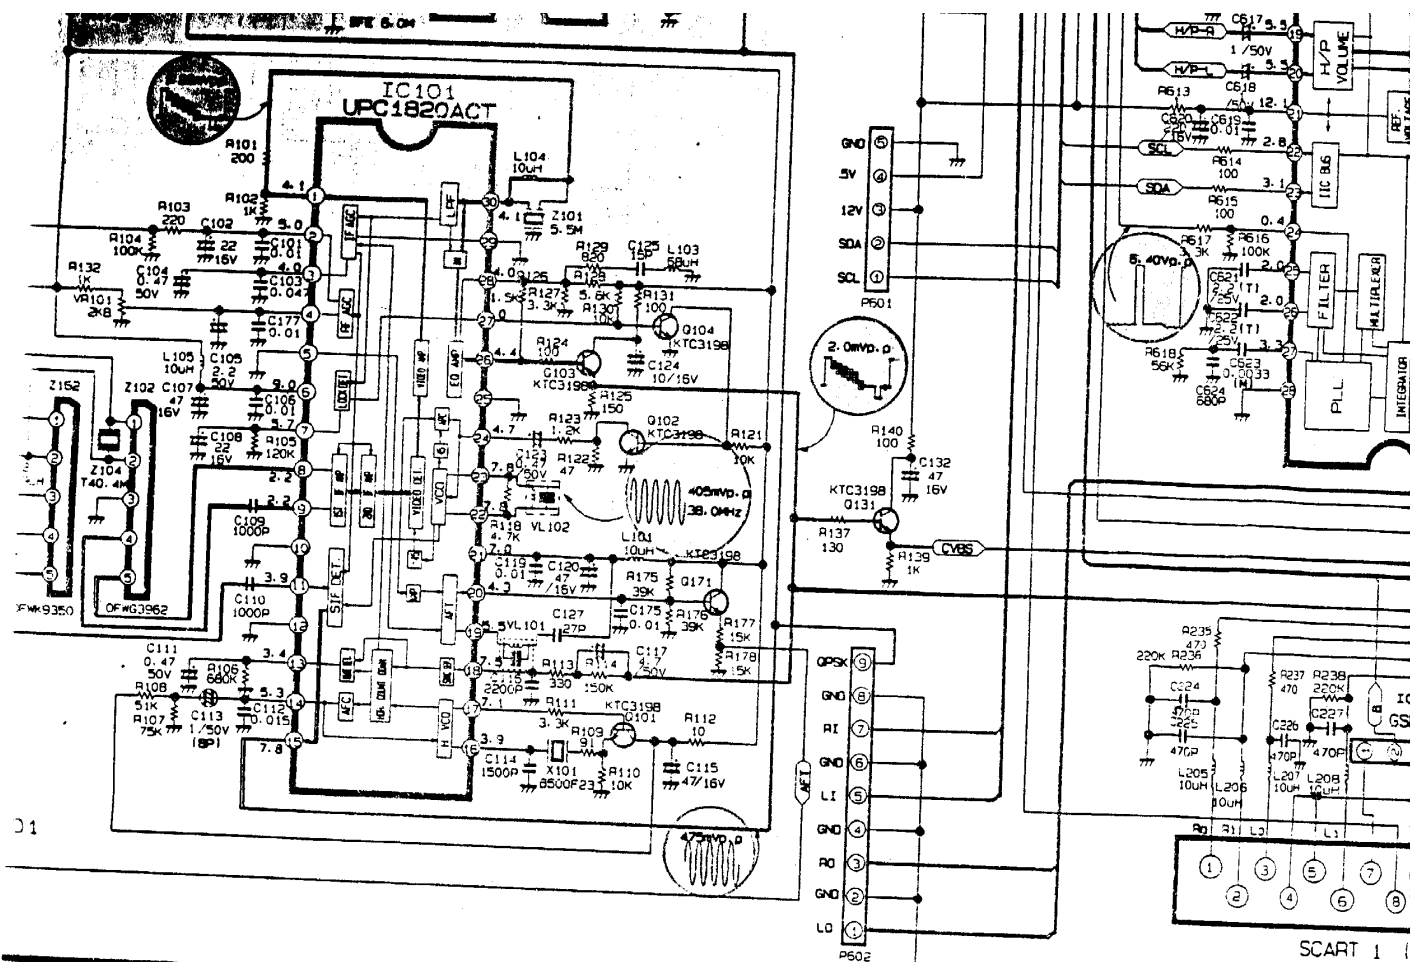

NO PICTURE/NO SOUND
(RASTER OK)

Check the 33V at Tuner

0V

normal

Check/Replace
FR703, D703, ZD704

Check the waveform at the emitter of Q103

normal

abnormal

Check/Adjust
VIF/SIF

Check the voltage at the
pin6 of IC101

0V

normal

Check/Replace
IC104

Check/Replace
IC101, Tuner

abnormal

Check/Replace
X501

ing

6.0-6.6Vrms

Increase screen voltage of FBT

black

Retrace line is visible

Check/Replace
FR701, D701

Check/Replace
IC901

trast &
y OSD

normal

Check the voltage at
the pin13 of IC501

0V

Check the voltage at
the pin14 of IC501


0V

Check the waveform
the pin6 of IC503


0V


Check the voltage (7.5Vp-p)
the pin13 of IC501

Check the voltage (7.5Vp-p)
the pin13 of IC501

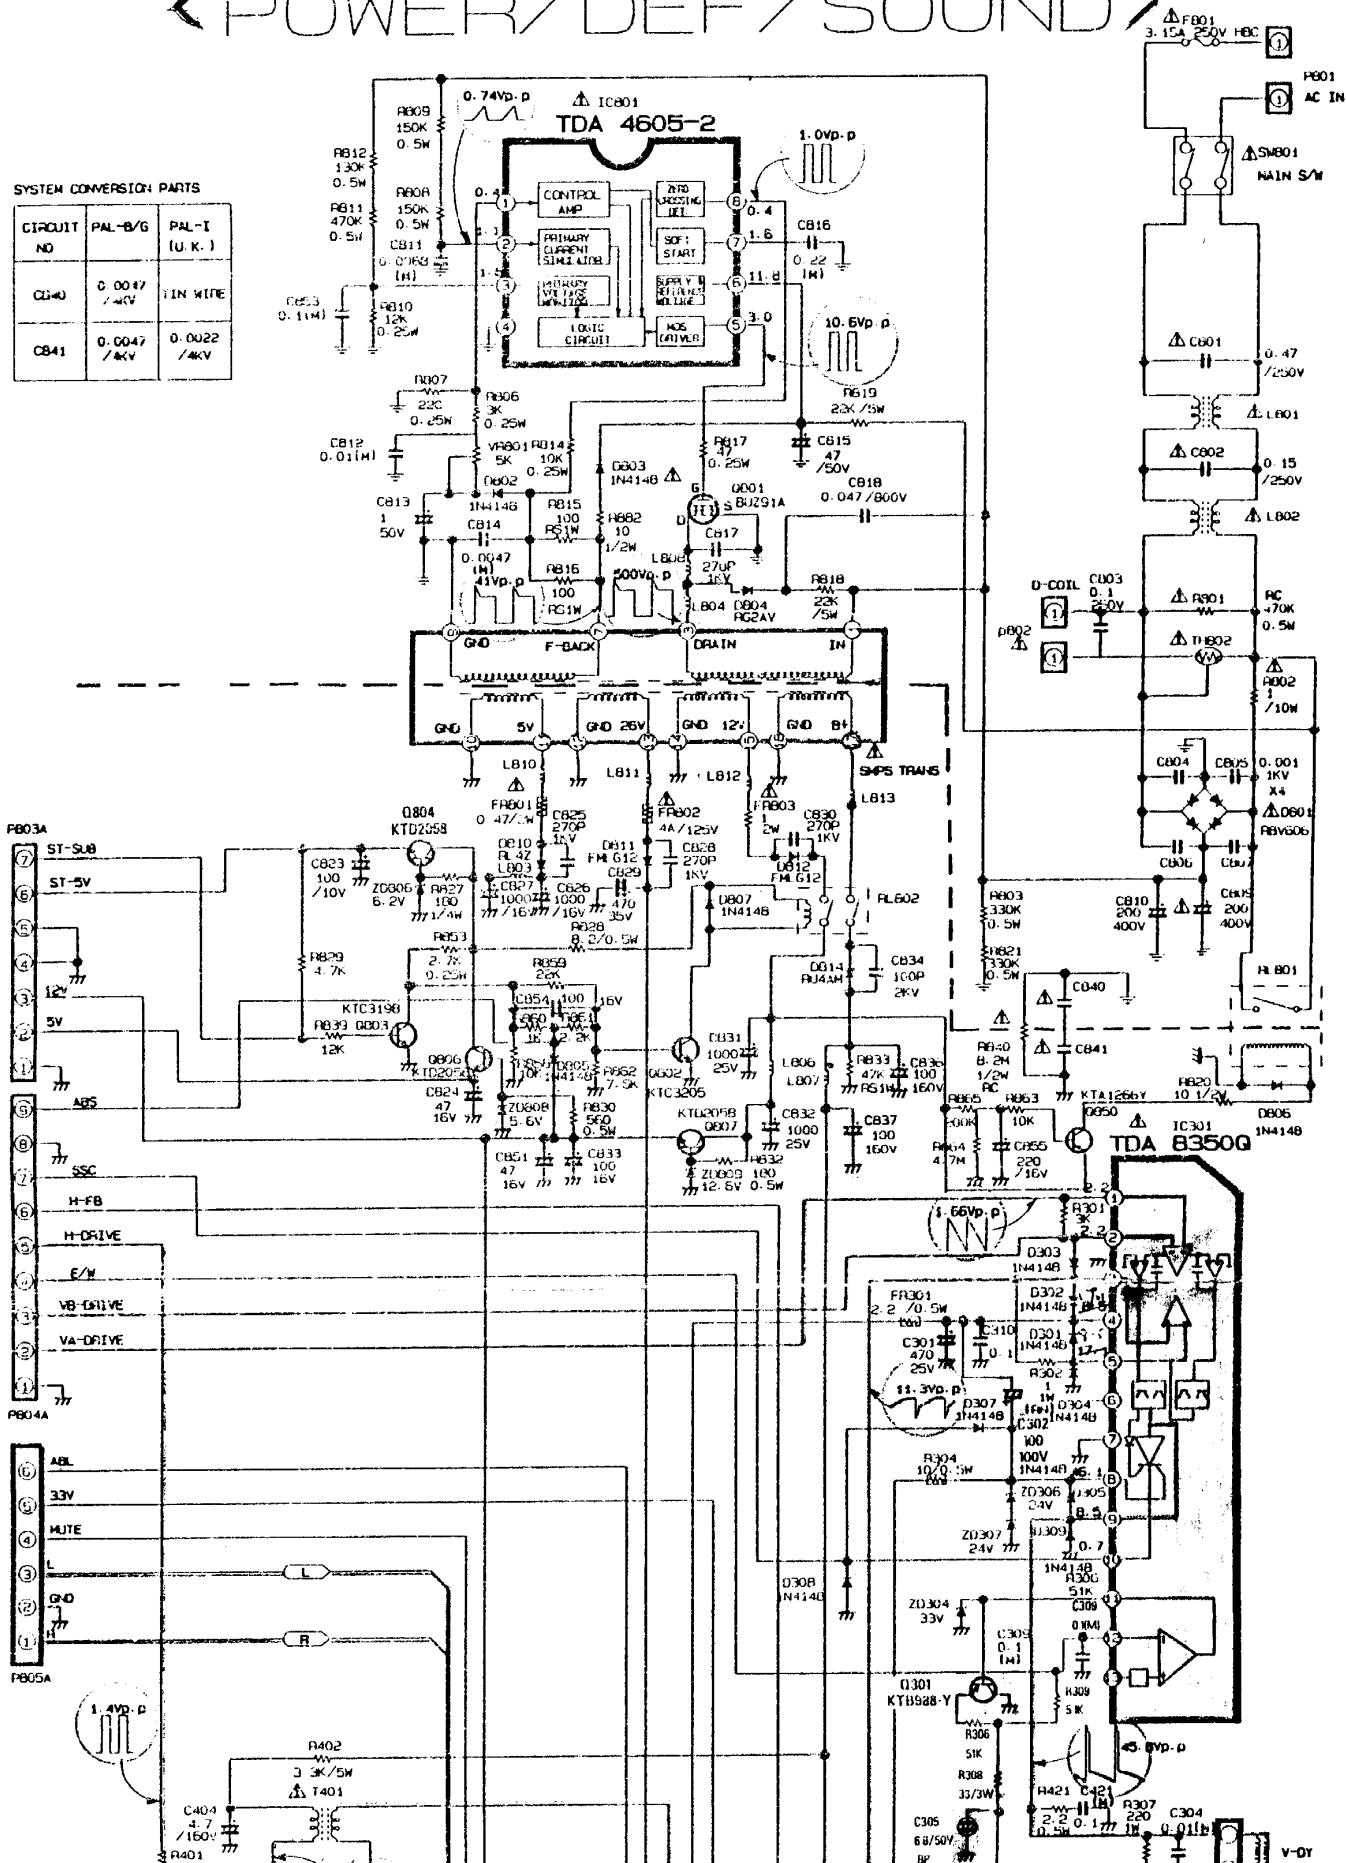


P805A

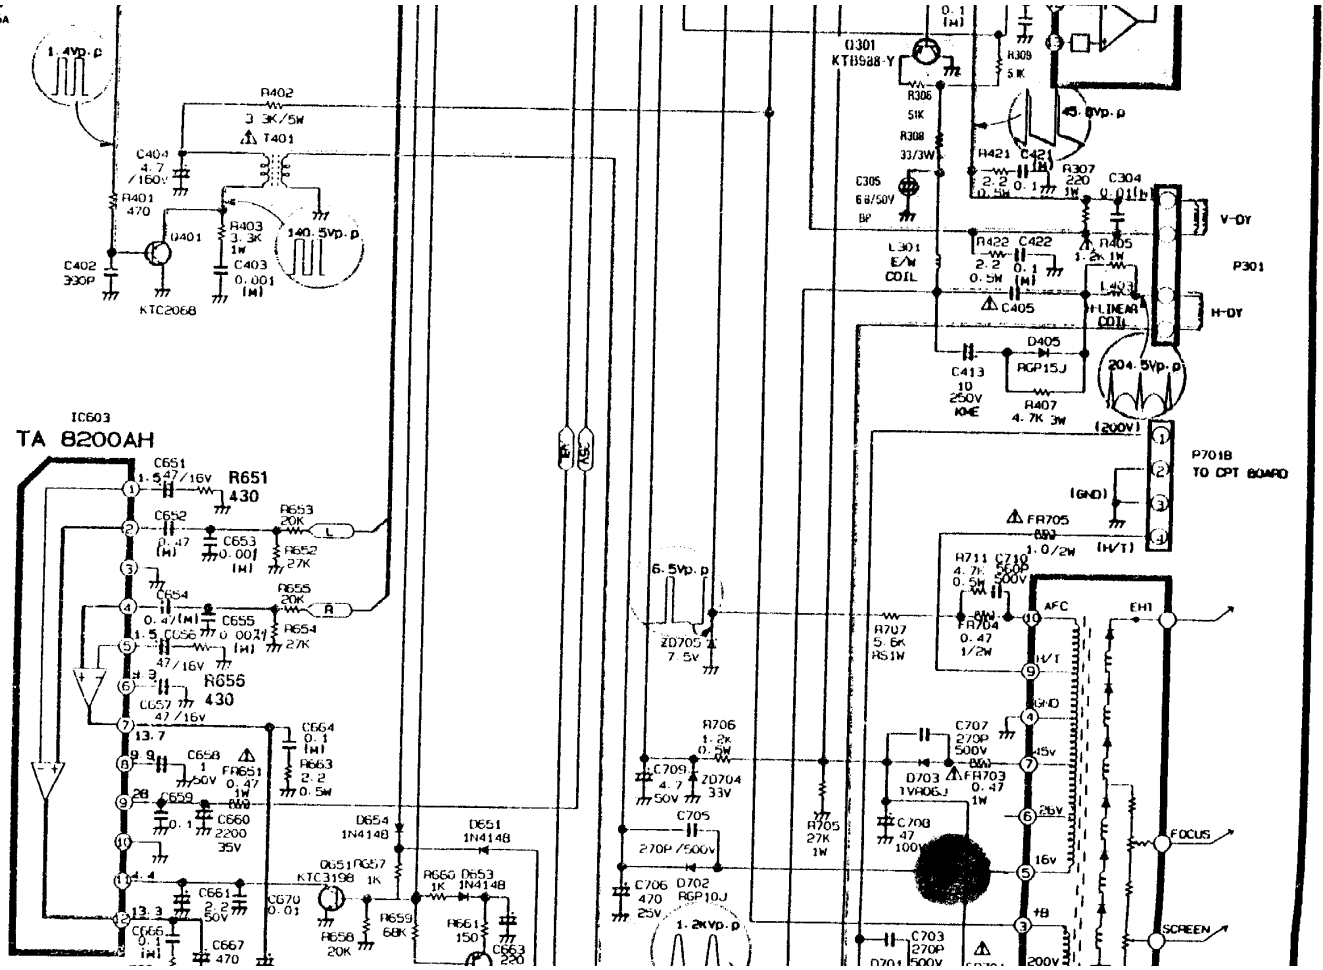

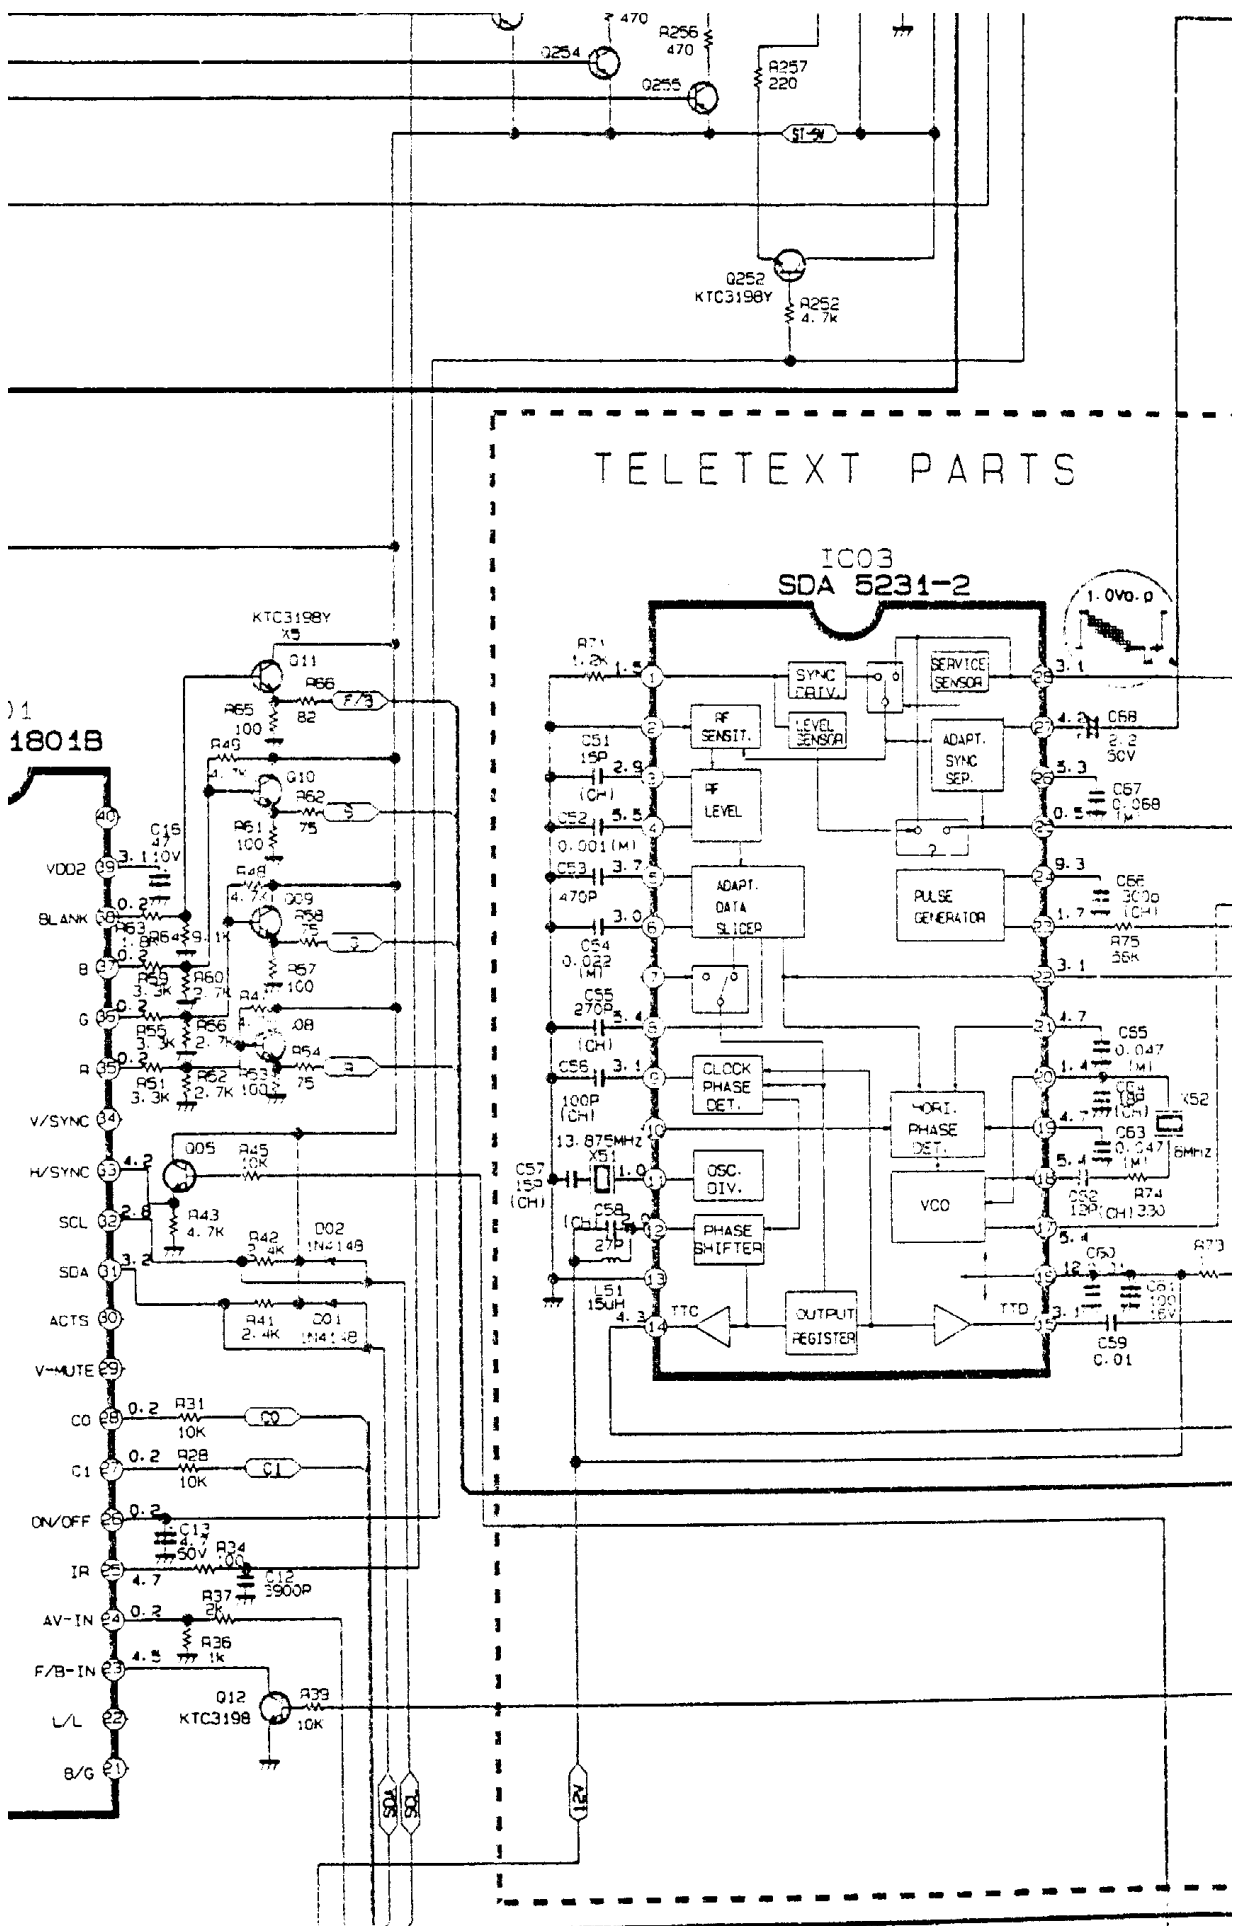

<CONTROL PARTS>

: CF-25C20 MODEL ONLY

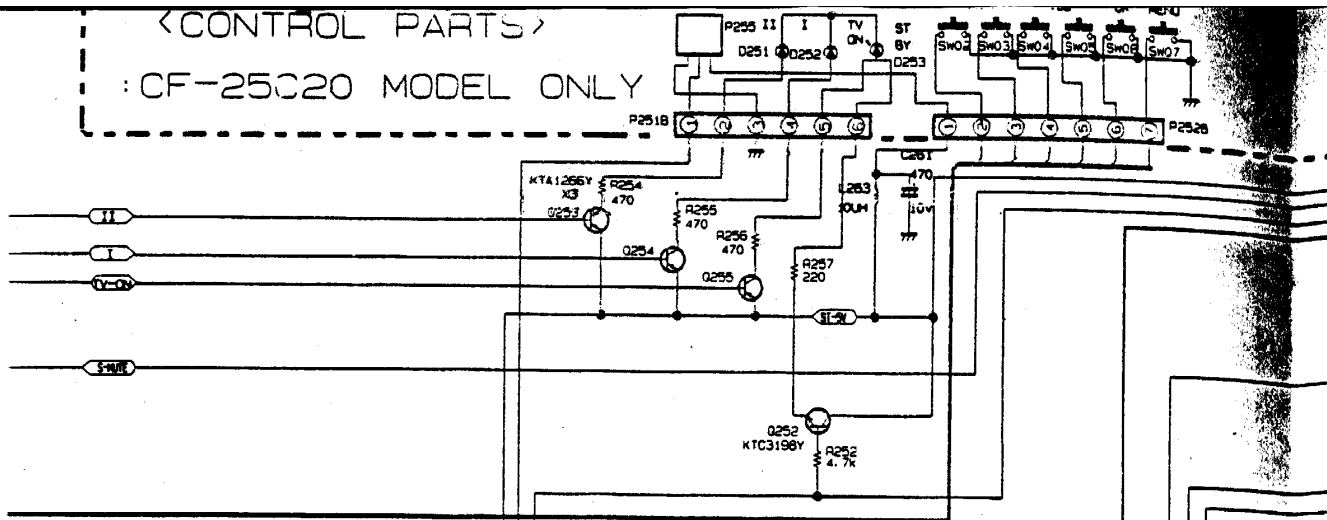

TELETEXT PARTS

